

VersaTrigger wave Handheld and Remote – User Information

Introduction

The VersaTrigger wave handheld and remote is a basic remote-control system, pressing the button on the handheld unit will result in an output on the remote unit. The remote unit will operate for 1 second longer than the duration that the handheld button is pressed; if you hold the button down then the remote will operate continually, if you give a short press the remote will operate for 1 second. Note that an additional camera cable is required and that the camera must be set to manual focus and focussed on the image to be captured.

1 Identifying the units



Handheld

Remote

2 Fitting the batteries



1. Place the VersaTrigger wave remote unit face-down on a flat surface, remove the battery cover by gently pulling the retaining clip down.
2. Fit a new PP3 battery by pressing the battery snap on to the battery, replace the cover.
3. Repeat points 1 and 2 for the VersaTrigger wave handheld unit.

3 Using the system

Connect the red connector of the camera cable into the red connector of the remote unit, connect the other end of the camera cable into your camera, switch on the remote (the light should glow green), now switch on your camera. Press the red button of the handheld to trigger your camera.